




Cr-48 Chromebook Wi-Fi Card Replacement

With this guide you will be able to remove and replace your Wi-Fi card.

Written By: Robert McLaughlin

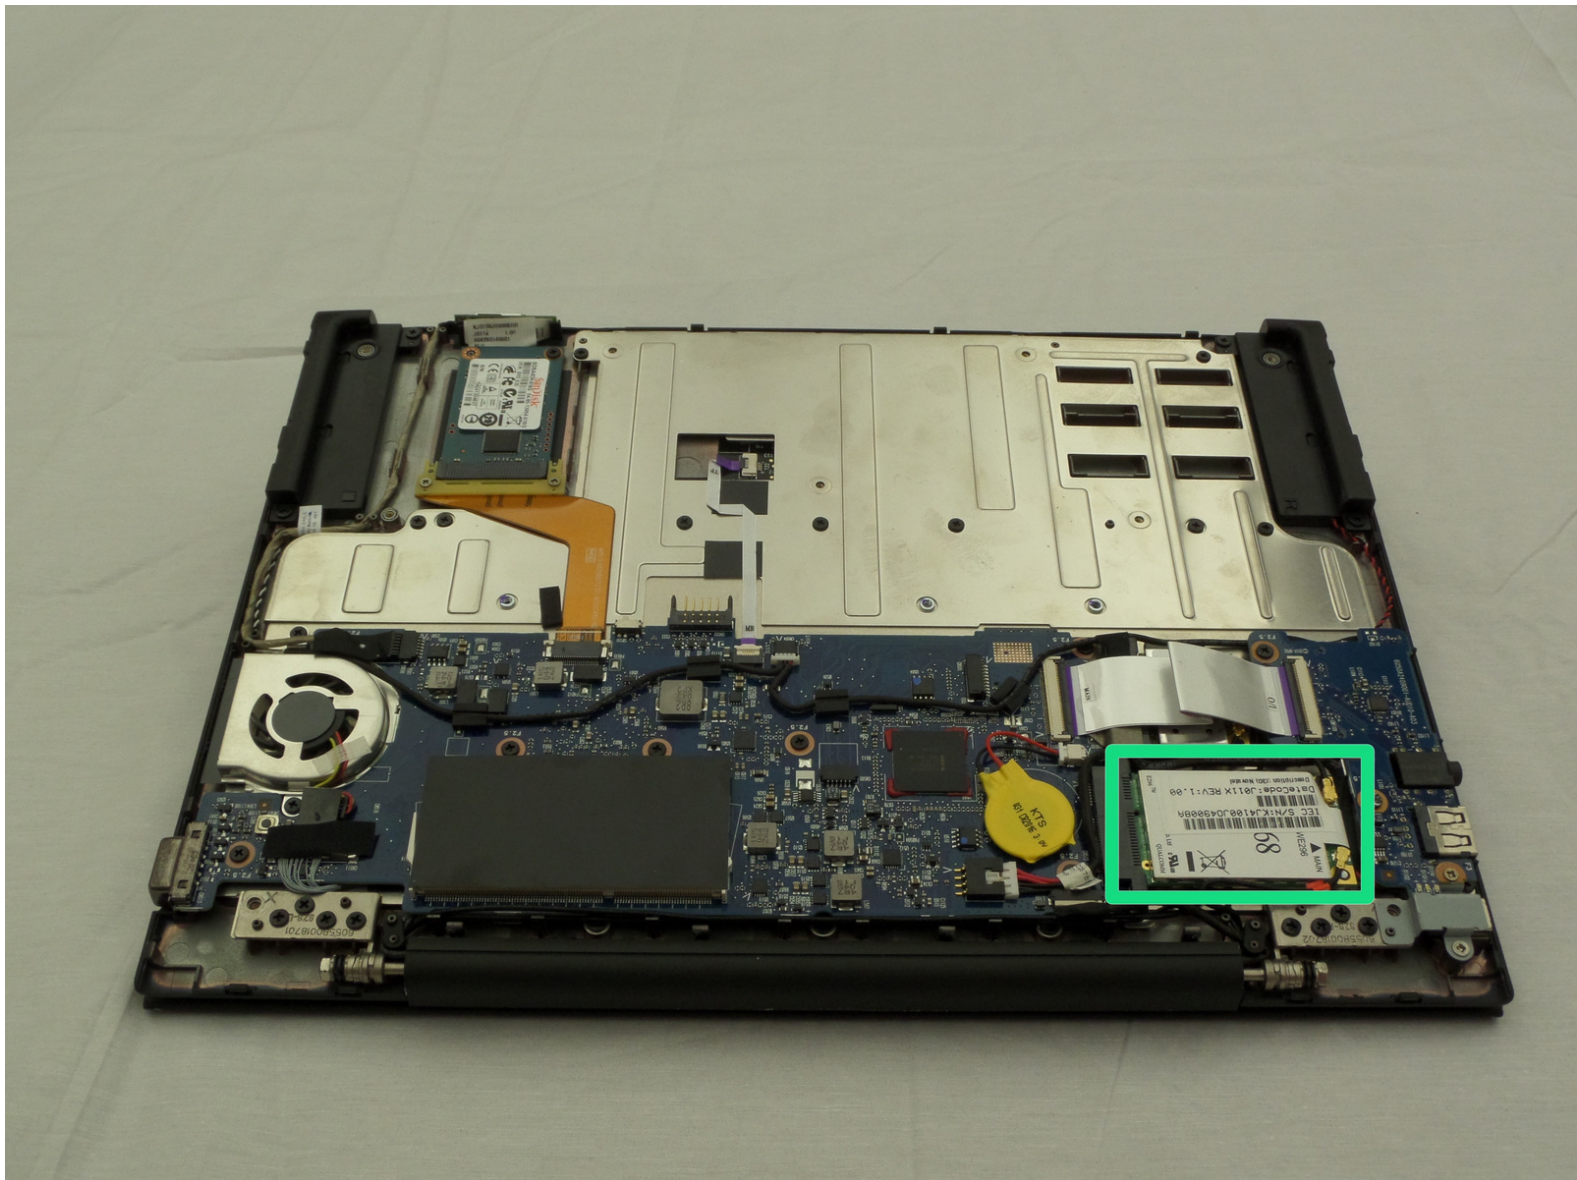



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Remove the Battery






- Slide the switch on the bottom of the laptop until the battery pops out.
- Once the battery pops out, you can remove it.

Step 2 — Remove Rear Rubber Feet

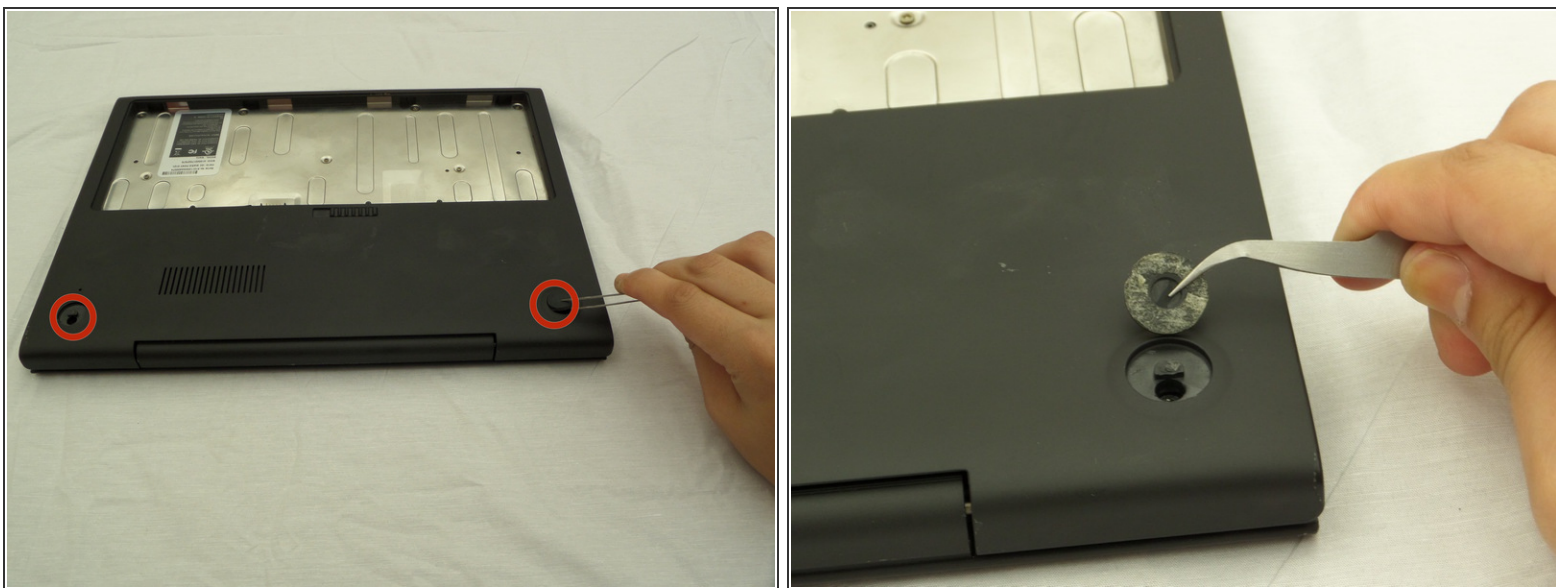




- Using forceps or tweezers, remove the two rear rubber feet to expose two hidden screws.

Step 3 — Remove Screws

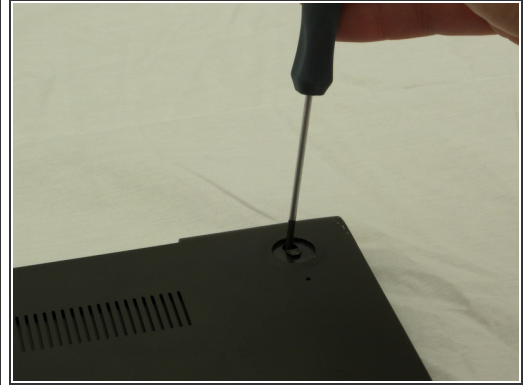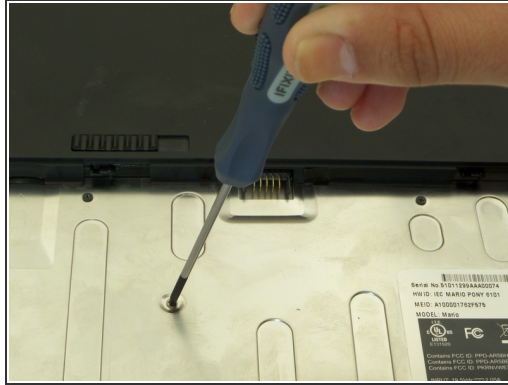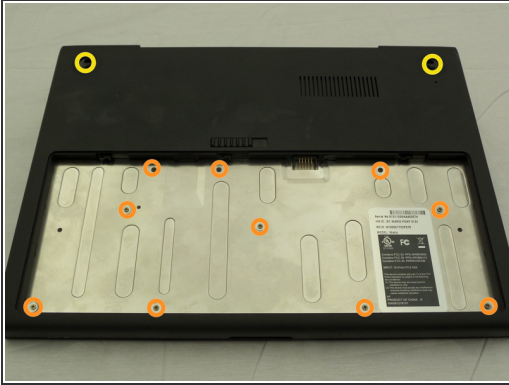


- Using a Phillips head #00 Screwdriver, remove a total of 12 screws:
 - 10 screws in the battery compartment.
 - size ph#00, approximately 3 mm long
 - 2 screws under the rubber feet previously removed
 - Size ph#00, approximately 4.5 mm long

Step 4

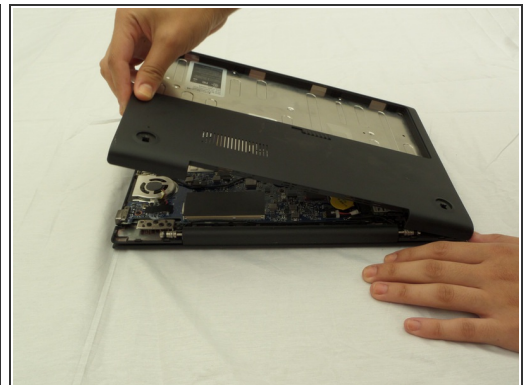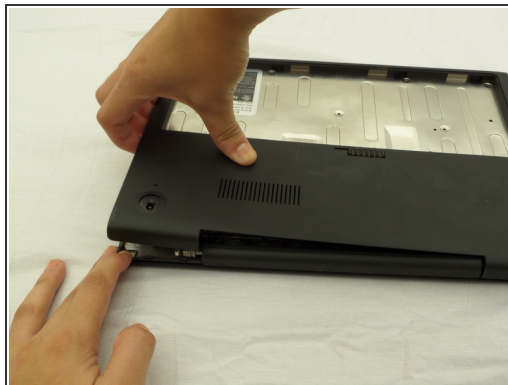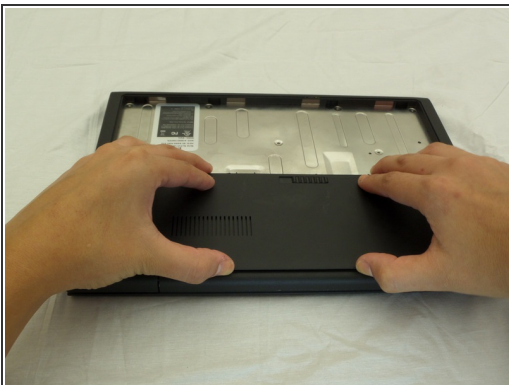


- Starting where the body of the laptop and the laptop screen meet, pry apart the lower case from the rest of the laptop.
- ① The case is easier to remove when separating in a clockwise motion, as seen in the pictures.

Step 5 — Identify the Wi-Fi Card and Remove the Connectors

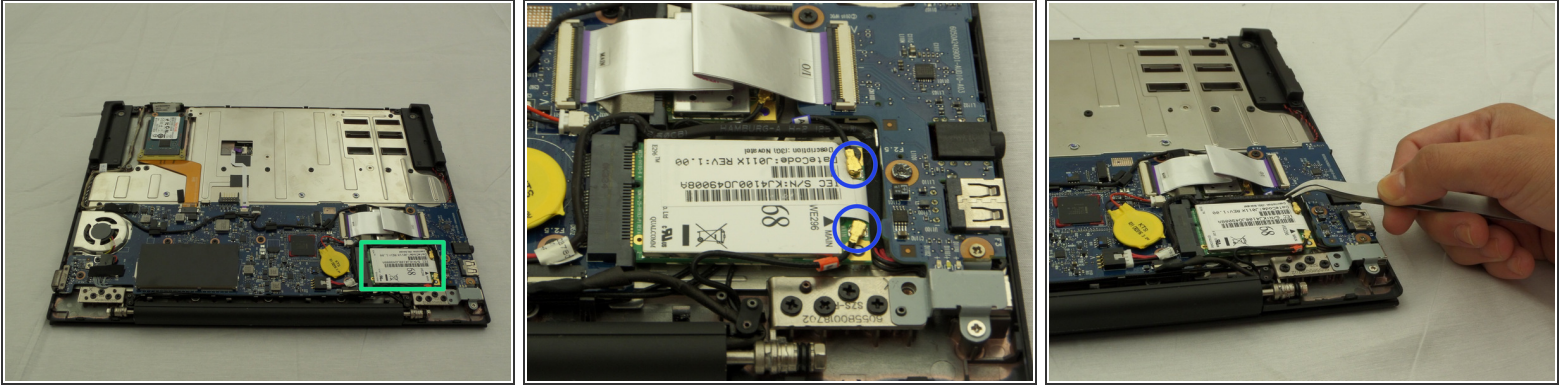

- Once you've removed the lower case, you should see the Wi-Fi card on the corner of the device containing the USB port.
- Disconnect the Wire connections on the Wi-Fi card using forceps or tweezers.

Step 6 — Unscrew and Remove Wi-Fi Card

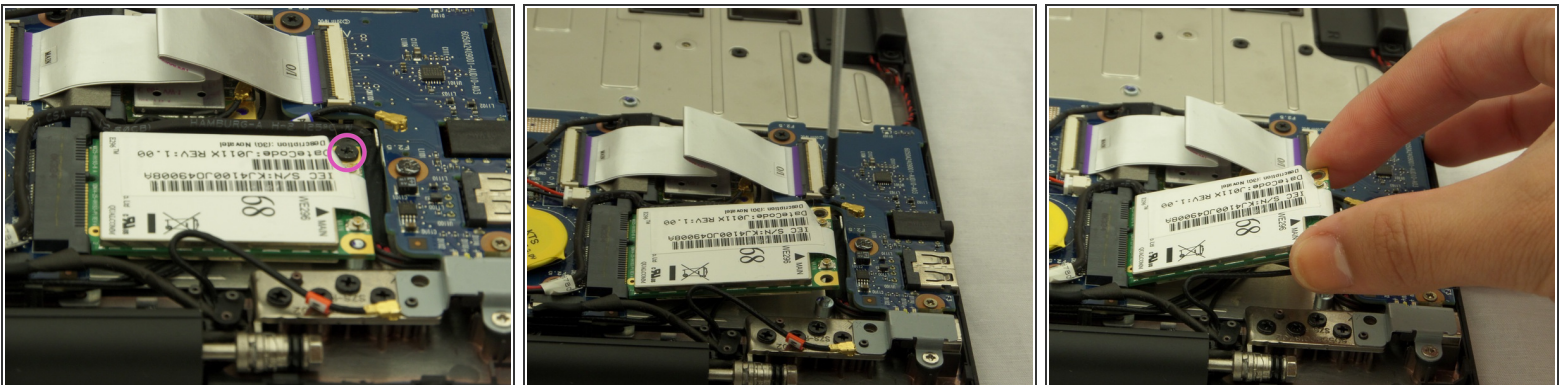

- Remove Screw securing Wi-Fi card.
 - Size ph#00, approximately 3 mm long.
- i** Once the screw is removed, the Wi-Fi card will pop up.
- Pull the Wi-Fi card to remove it from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 04:14:08 PM.